



StoryWalk® Solutions

FRAME WITH SLEEVE FOR YOUR WOOD POST - ANGLED


Aluminum sleeve is mechanically attached to the frame. Sleeve fits over a 4x4 wood post, cut at 45 degree display angle. Post is approx. 3.5"x3.5"

For a 18"h x 24"w page, with a viewable area of 17" h x 23" w.

Can install to recycled lumber posts 3.5"x3.5"x60"

Installed height 28" to 32"

Prepare footing depth per your regions requirements.
Ensure post is plumb and level while back filling with appropriate material.
Option if not using concrete – drill a 9/16" hole at 2" from the base of the post. Install 8" of rebar into the hole.

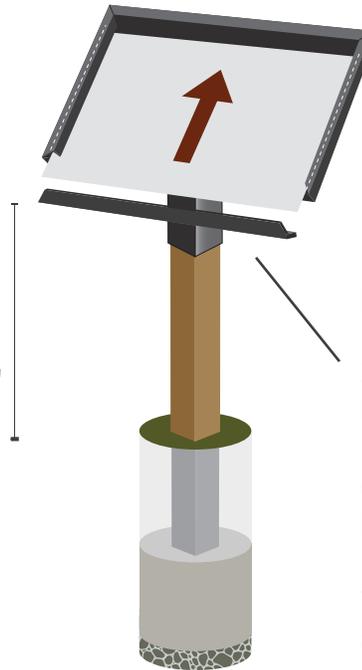

Removable bottom rail for page insertion.

2 sheets of acrylic - with the laminated page between them - slide up into the exposed channel of on the bottom of frame.

The powder coated aluminum frame has a 1 year warranty.


Made in the USA!

Assembly Instructions

1. To make TWO 60" long posts, mark the center point of a 10' long treated 4x4. With a speed square, mark a 45-degree cut line on each post side. Cut in half, on the 45, with a circular saw.
2. Drill a 9/16" thru hole for 8" of rebar, if desired.
3. Install the sleeve assembly to the post using the (2) SPAX screws and the provided SPAX driver.
4. Install the frame to the sleeve with the (4) allen head screws, (1) flat washer, and (1) nylock nut. The allen driver is provided, you will need a 7/16" socket to install the nylock nut. Do not use power tools as stainless steel hardware will gall and seize.
5. Last, remove the bottom frame rail 2 screws with the allen driver. Holding the rail in your hand, install a screw thru the rail, then push a white retaining washer down over the threads. Repeat. The retaining washer will help keep the screws in the frame rail which you replace pages.

Page Installation – first time

1. Remove the blue masking from both sides of the acrylic.
2. Place your page and optional colored backer between the sheets of acrylic. Be sure your pages are numbered.
3. Remove the bottom frame rail using the provided driver.
4. Slide all the sheets up into the exposed channel in the frame.
5. Replace the bottom rail.

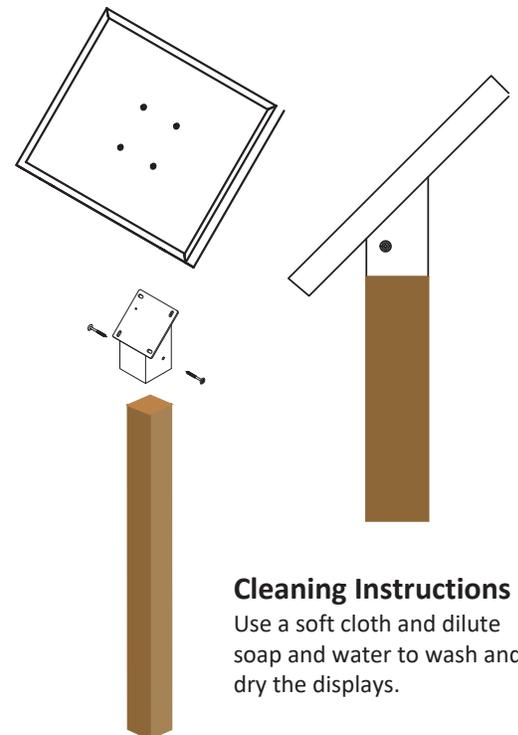

Cleaning Instructions

Use a soft cloth and dilute soap and water to wash and dry the displays.

DO NOT USE ammonia cleaners (Windex) or paper towels.