



# StoryWalk® Solutions

## FRAME WITH MOUNT FOR YOUR WOOD POST - FLUSH

Aluminum frame is attached to the face of a 4x4 wood or recycled plastic lumber.


A post protector is optional, to help inhibit weathering of the post top.

For a 18" h x 24" w page, with a viewable area of 17" h x 23" w.

Flush mounted

Sign panel mounts  
28–32" from grade

Prepare footing depth per your regions requirements.  
Ensure post is plumb and level while back filling with appropriate material.  
Option if not using concrete – drill a 9/16" hole at 2" from the base of the post.  
Install 8" of rebar into the hole

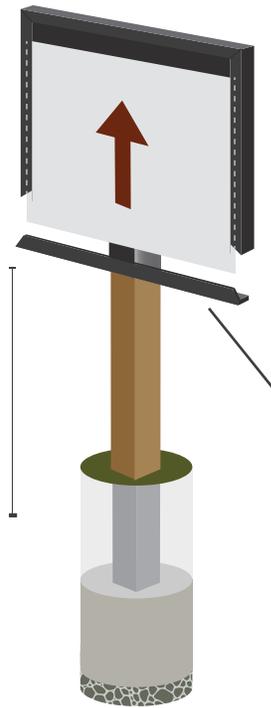

Removable bottom rail for page insertion.

The 2 sheets of acrylic - with the laminated page between them - slide up into the exposed channel on the bottom of the frame

The powder coated aluminum frame has a 1 year warranty.

Made in the USA!

### Cleaning Instructions

Use a soft cloth and dilute soap and water to wash and dry the displays.


**DO NOT USE** ammonia cleaners (Windex) or paper towels.

### Assembly Instructions

1. To make TWO 60" long posts, mark the center point of a 10' long treated 4x4. Cut in half with a circular saw.
2. Drill a 9/16" thru hole for 8" of rebar if desired.
3. Install the mount assembly to the post using the (2) SPAX screws and the provided SPAX driver.
4. Install the frame to the mount with the (4) allen head screws, one flat washer, and one nylock nut. The allen driver is provided, you will need a 7/16" socket to install the nylock nut. Do not use power tools as stainless steel hardware will gall and seize.
5. Last, remove the bottom frame rail 2 screws with the allen driver. Holding the rail in your hand, install a screw thru the rail, then push a white retaining washer down over the threads. Repeat. The retaining washer will help keep the screws in the frame rail which you replace pages.

### Page Installation – first time

1. Remove the blue masking from both sides of the acrylic.
2. Place your page and optional colored backer between the sheets of acrylic. Be sure your pages are numbered, or you know what page order they should be installed.
3. Remove the bottom frame rail using the provided driver.
4. Slide all the sheets up into the exposed channel in the frame.
5. Replace the bottom rail.

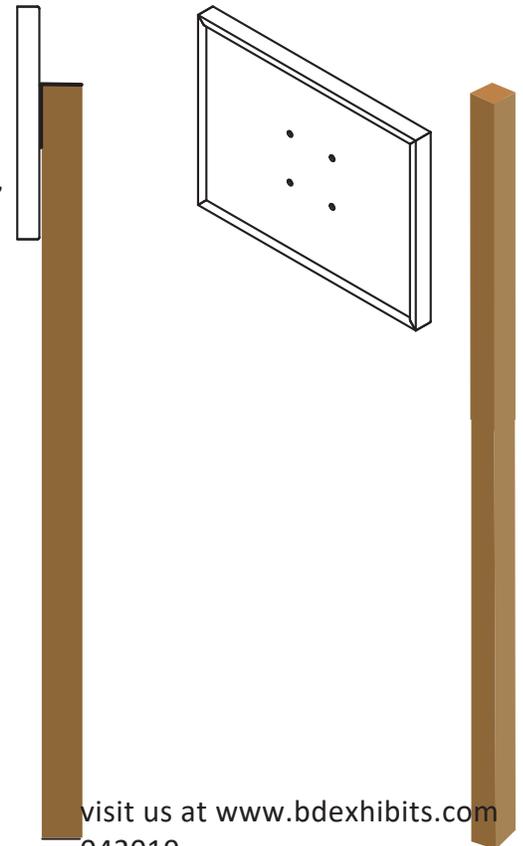

visit us at [www.bdexhibits.com](http://www.bdexhibits.com)  
042019